

Point-of-Sale Hardware Parts List

Hardware

1. Pole Display
2. Receipt Printer, Parallel
3. Cash Drawer
4. Cash Drawer Shoe
5. Keyboard
6. CCD LR Bar Code Scanner
7. Scanner Autosense Stand

Cables

1. Pole Display Power Cord
2. Pole Display DB9 Communications Cable
3. Receipt Printer Parallel Cable
4. Receipt Printer Power Supply w/ Power Cord
5. Cash Drawer Communications Cable
(Cable is hardwired to Cash Drawer)
6. Keyboard Communications Cable
(Cable is hardwired to Keyboard)
7. CCD LR Scanner Cable (PS2 Y Cable)


Documentation

1. Quick Start
2. Pole Display User's Manual
3. Receipt Printer User's Manual
4. CCD LR User's Manual
5. Keyboard Utility CD


Software

1. Only included in software bundles

Wasp Technologies
1400 10th Street
Plano, Texas 75074
214-547-4100
Fax: 214-547-4101
www.waspbarcode.com

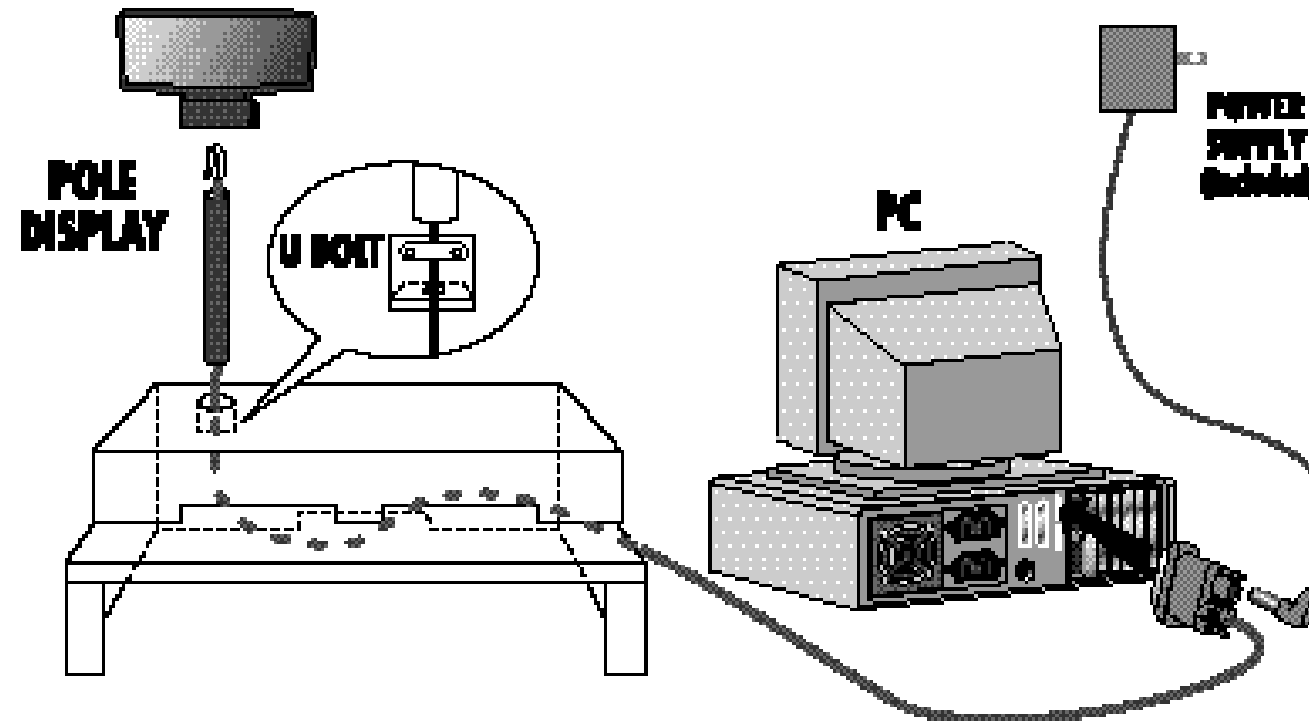


- 1** Thread **Pole Display Cable** through **Cash Drawer Shoe**, through **Pole Display Pole**, and connect to the **Display Head**. Connect **Pole to Display Head**, and tighten **U-Bolt** within **Shoe** around **Pole Display Pole** to secure. Thread other end of **Pole Display Cable** through **back slot** of **Cash Drawer Shoe**, and connect to your **PC**. **Power Supply** connects as shown, and plugs in standard wall outlet.

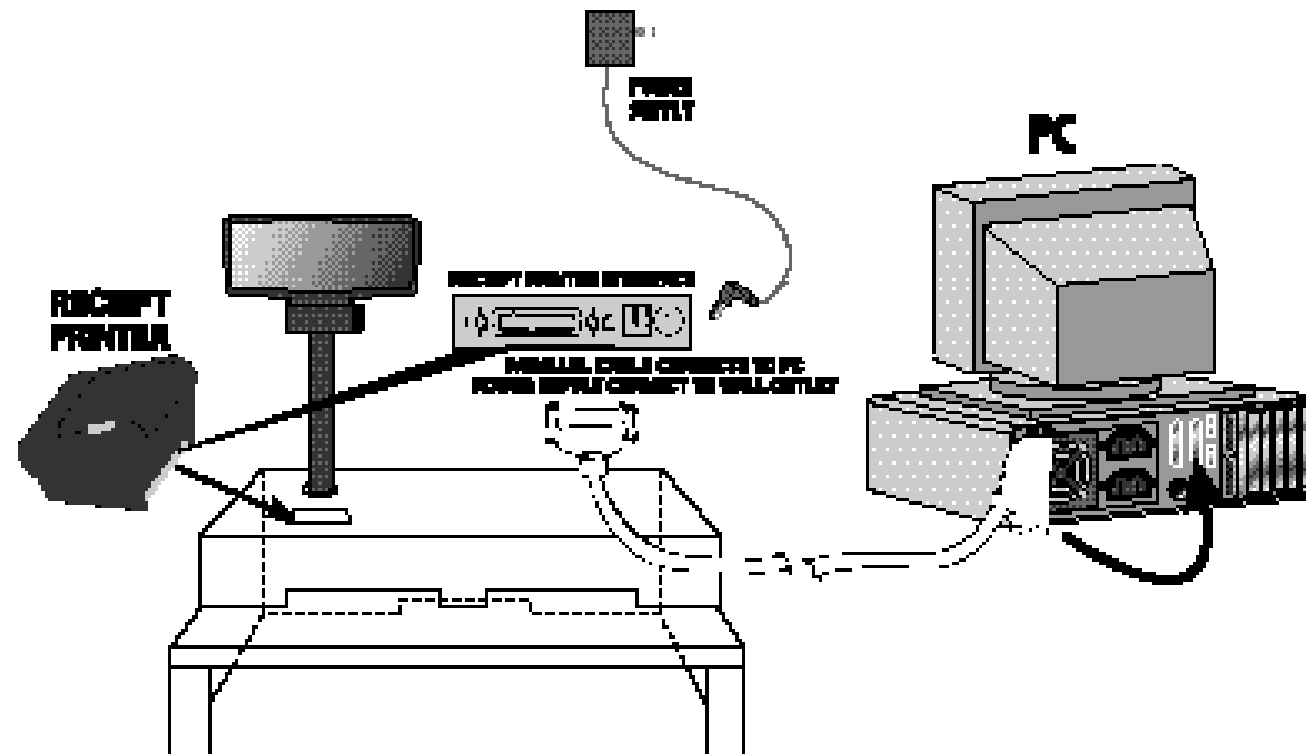


- 2** Thread both **Parallel Cable** and **Power Supply Cable** up through **rectangular slot** on top of **Cash Drawer Shoe** (in front of Pole Display) and connect to **back** of **Receipt Printer**. Thread other ends of **Parallel Cable** and **Power Supply** out through **back slot** of **Cash Drawer Shoe**. Connect **Parallel Cable** to **Parallel Port** on back of your **PC**, and plug **Power Supply** into standard wall outlet.


Point-of-Sale Hardware Quickstart Setup Guide

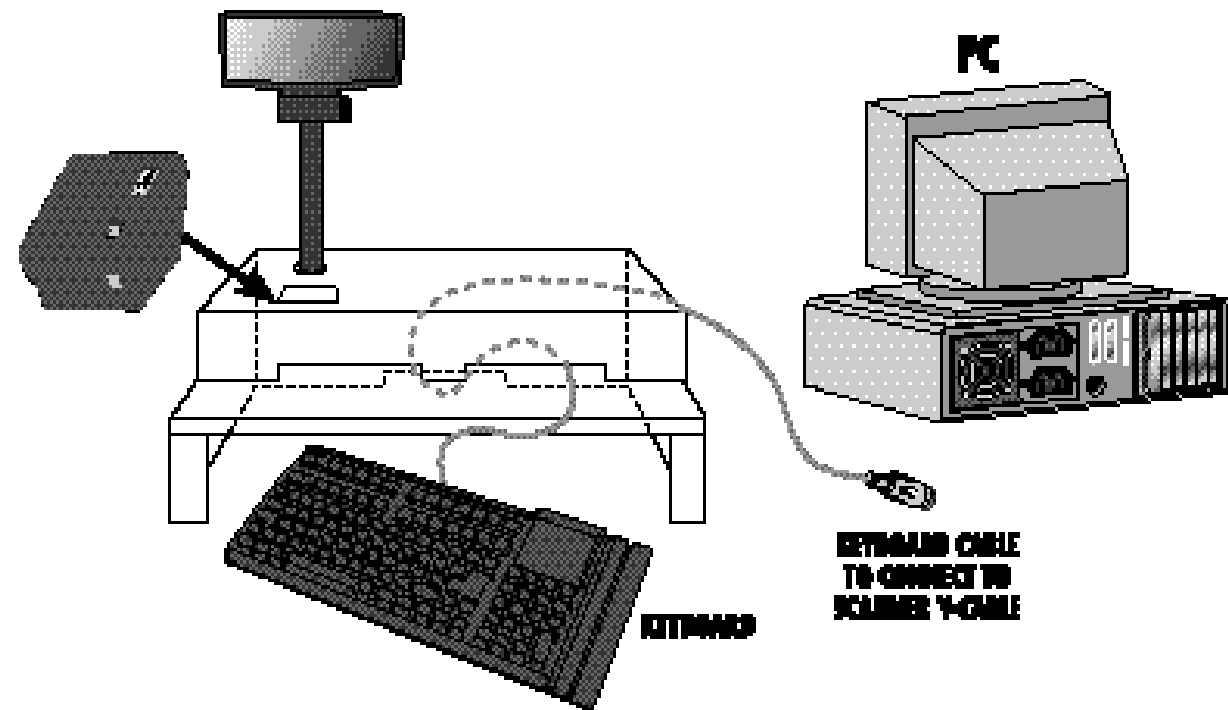

3 Thread **Keyboard Cable** through *right front slot* of **Cash Drawer Shoe** and out through *back slot* of **Cash Drawer Shoe**. Place **Keyboard** on lower "shelf."

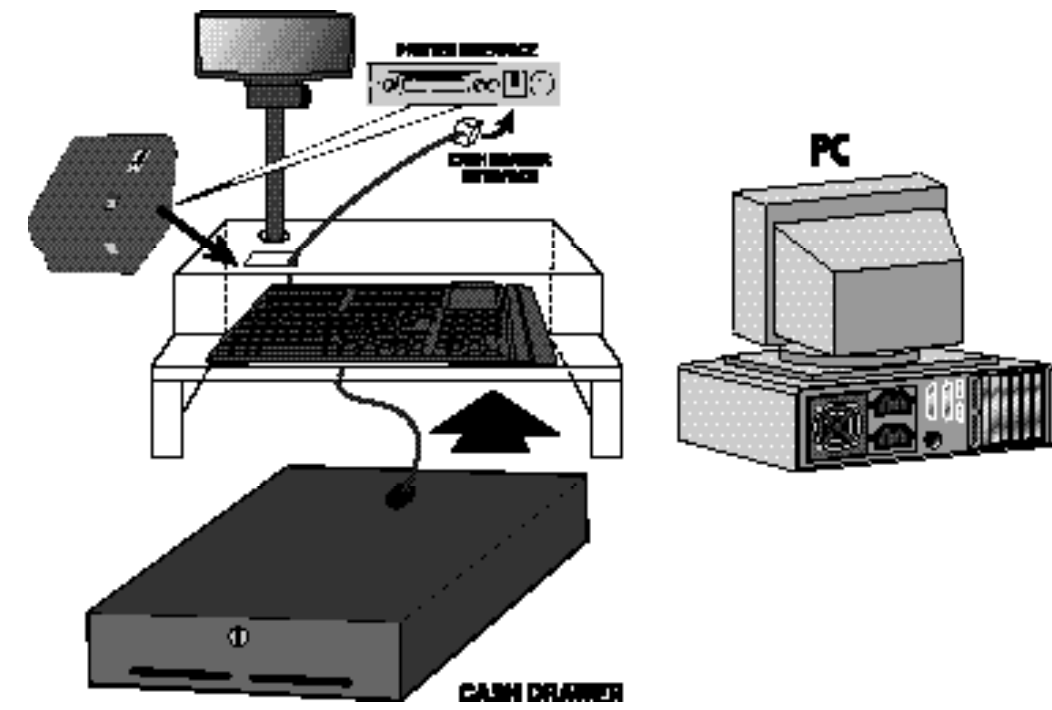

4 Thread **Cash Drawer Cable** up through *rectangular slot on top* of **Cash Drawer Shoe** and connect to the *back* of the **Receipt Printer**, as shown in illustration. Slide **Cash Drawer** under **Cash Drawer Shoe**, and align front of drawer with front of **Cash Drawer Shoe**.

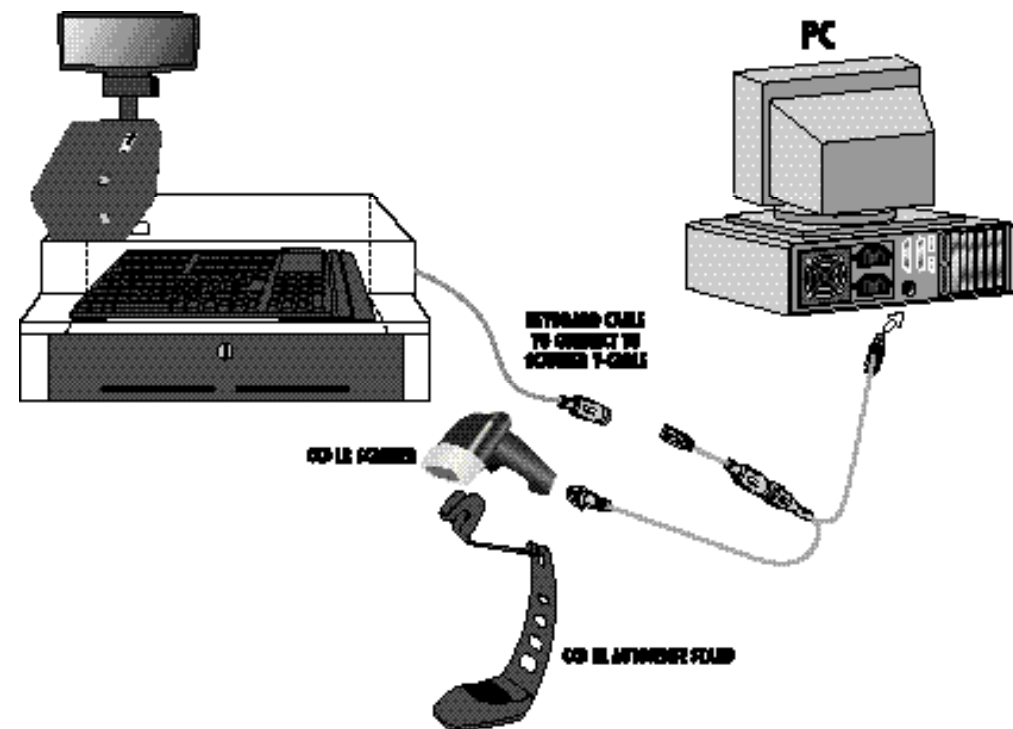

5 Connect **Scanner Y-Cable** in appropriate slot in the *handle* of **CCD LR Scanner**, and place Scanner in the **CCD LR Autosense Stand**. Connect other end of the Scanner Y-Cable to the Keyboard Cable (see diagram 3), and then connect female end of Y-Cable to the keyboard port of your PC.

6 Please reference *pages 6-7* of your **Receipt Printer Manual** for proper loading of receipt paper into the Receipt Printer, and also please refer to *page 6* in the **CCD LR Scanner Manual** to program the Autosense Mode for hands-free scanning using the Autosense stand.

Wasp Technologies
1400 10th Street
Plano, Texas 75074
214-547-4100
Fax: 214-547-4101
www.waspbarcode.com