

WWS800/850

HID Character Transmit Mode

By default, HID interface sends data to the host in batch mode. You may have the scanner read the "By Character" barcode to process data one character at a time instead.



Enter Setup



Batch Processing

OR



By Character



Update