

CCD Setup & Configuration

—Preamble/Postamble Configuration

The 'Preamble/Postamble' configuration is used to add a prefix or suffix set of characters to the bar code value. Up to 4 characters may be added for each option separately. Preamble and postamble characters can function concurrently, but need to be configured separately.

To add preamble or postamble characters, follow the steps below:

- (1) Scan the 'Begin' bar code on this page
- (2) Scan the 'Preamble' or 'Postamble' option
- (3) Use Appendix B on page 23 to locate the characters you want to add as preamble or postamble characters. Find the two character 'Code' associated with the character you want to add. Scan the two characters on page 25. Make sure that you scan the two bar codes associated with each letter before preceding to the next character. This step can be repeated up to six more times - seven total. For example, to add the letter "A," scan the "4," and then the "1" on page 25. The letter "A" will always appear in your data as a prefix or suffix to the bar code value.
- (4) Scan the 'Set' option at the bottom of this page.
- (5) Scan the 'End' bar code on this page.



Begin

Preamble



Note: Please use Appendix B regarding the prefix string. You may add up to 4 characters as a Preamble.

Postamble



Note: Please refer to Appendix B regarding the suffix string. You may add up to 4 characters as a Postamble.



Set



End