 
 


**Wasp WWS800/850 Configuration Sheet For Sending Data by Character (BT-HID)**



**Enter Setup**



**Transmit : By Character**



**Update**