



Point-of-Sale Hardware Quickstart Setup Sheet

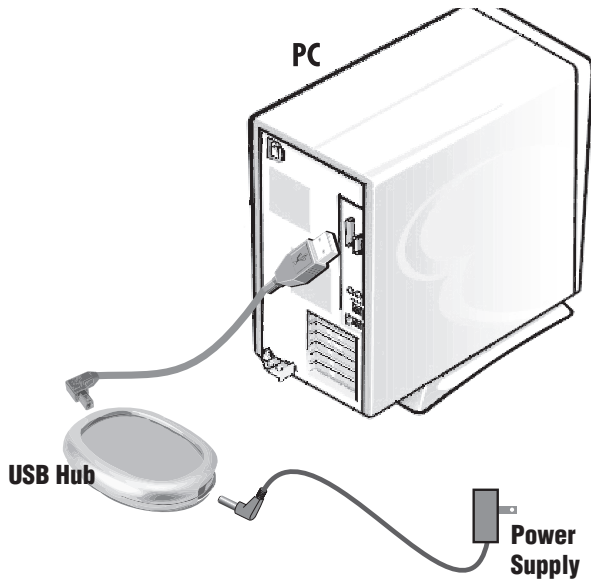


- 1** Plug the Power Adapter into the USB Hub and then into a standard wall outlet. Plug the USB Cable into the USB Hub and then into the USB port on your PC. Allow USB Hub drivers to load.

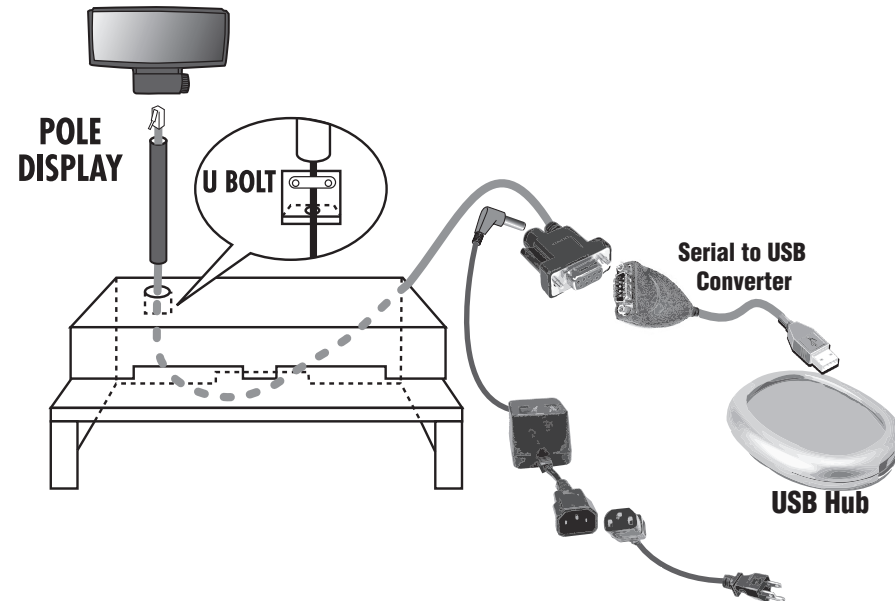


- 2** Thread Pole Display Cable through Cash Drawer Shoe, through Pole Display Pole, and connect to the Display Head. Connect Pole to Display Head, and tighten U-Bolt within **Shoe** around **Pole Display Pole** to secure. Thread the other end of **Pole Display Cable** through **back slot** of **Cash Drawer Shoe**, and connect to the Serial to USB Converter. Plug the USB end of the converter into the USB Hub or your PC. **Power Supply** connects as shown, and plugs into the AC Cord and then into a standard wall outlet. You should then insert the Serial to USB Converter CD and install the drivers.


- 3** Thread both **USB Cable** and **Power Adapter Cable** up through **rectangular slot** on top of **Cash Drawer Shoe** (in front of Pole Display) and connect to the **back** of **Receipt Printer**. Thread other ends of **USB Cable** and **Power Adapter** out through **back slot** of **Cash Drawer Shoe**. Connect **USB Cable** to **USB Hub** or your PC, and plug **Power Cable** into the AC Cord and then into a standard wall outlet.

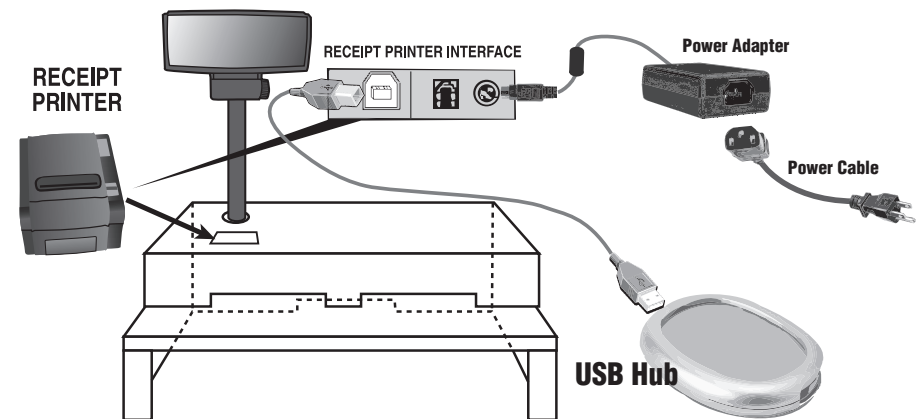


Point-of-Sale Hardware Quickstart Setup Sheet

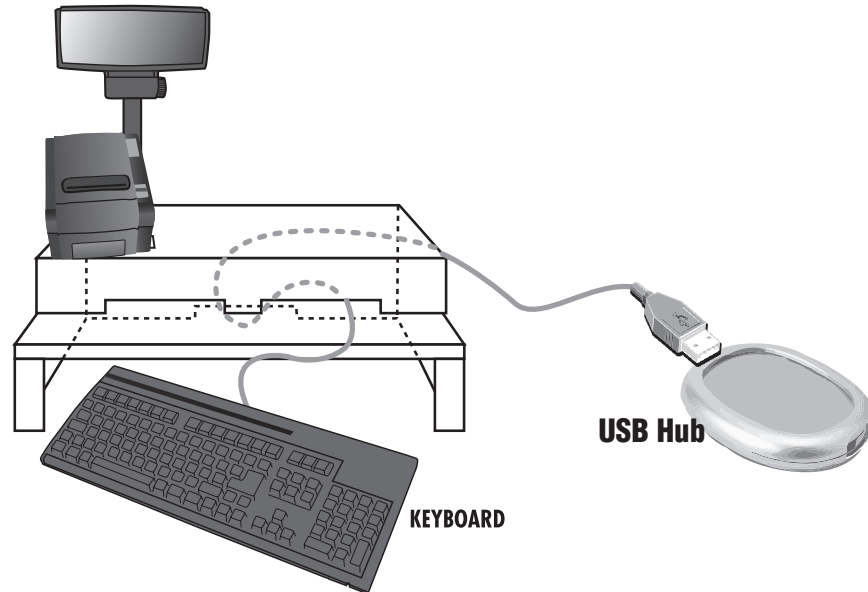

- 4** Thread **Keyboard Cable** through one of the **front slots** of **Cash Drawer Shoe** and out through **back slot** of **Cash Drawer Shoe** and connect to the **USB Hub** or your PC. Place **keyboard** on lower “shelf.”

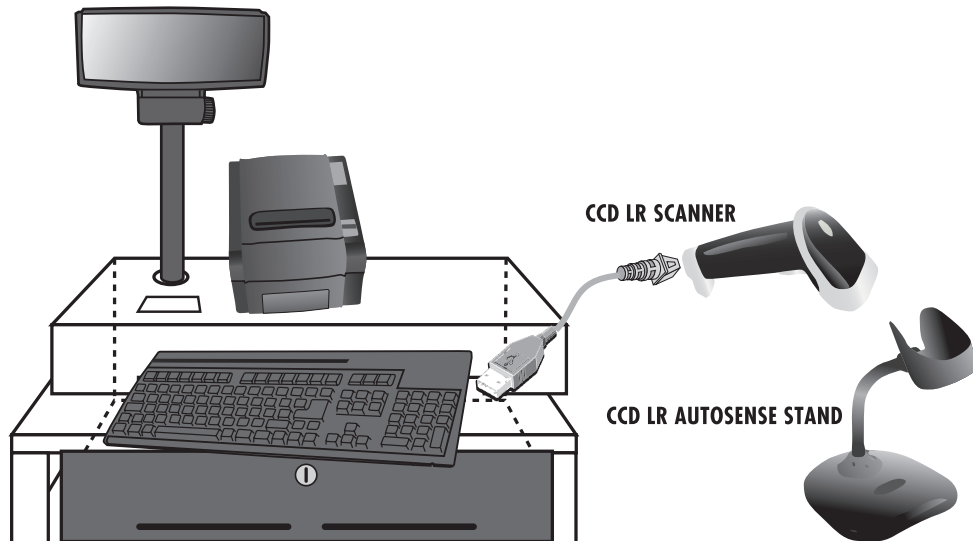

- 6** Connect **Scanner USB Cable** to one of the USB ports on the side of the Keyboard. Tuck USB Hub and all cables into the back of the POS Shoe.

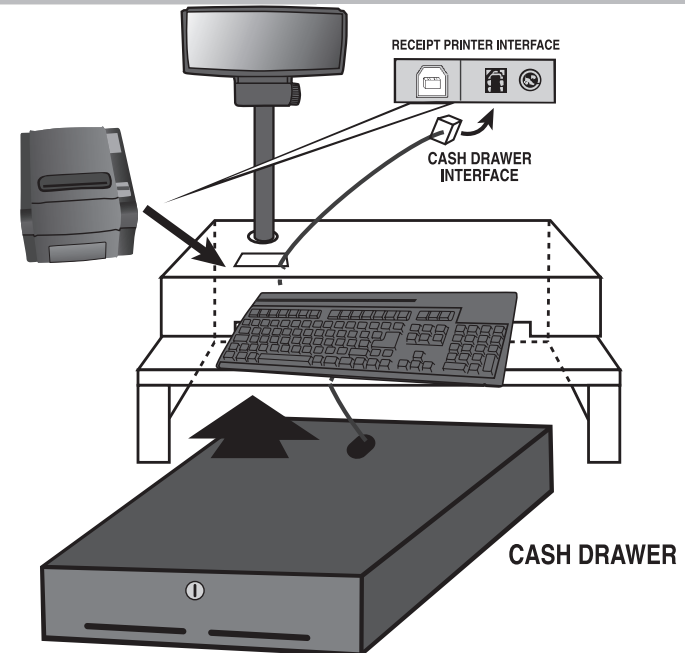

- 5** Thread **Cash Drawer Cable** up through **rectangular slot on top** of **Cash Drawer Shoe** and connect to the **back** of the **Receipt Printer**, as shown in illustration. Slide **Cash Drawer** under **Cash Drawer Shoe**, and align front of drawer with front of **Cash Drawer Shoe**.

- 7** Please reference **pages 6-7** of your **Receipt Printer Manual** for proper loading of receipt paper into the Receipt Printer, and also please refer to **page 6** in the **CCD LR Scanner Manual** to program the Autosense Mode for hands-free scanning using the Autosense stand.