
WPL206 Series

Direct Thermal Bar Code Printer

USER'S MANUAL

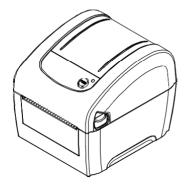

Copyright Information

©2015 Wasp Barcode Technologies.

The copyright in this manual, the software and firmware in the printer described therein are owned by Wasp Barcode Technologies, All rights reserved.

CG Triumvirate is a trademark of Agfa Corporation. CG Triumvirate Bold Condensed font is under license from the Monotype Corporation. Windows is a registered trademark of Microsoft Corporation.

All other trademarks are the property of their respective owners.

Information in this document is subject to change without notice and does not represent a commitment on the part of Wasp Barcode Technologies. No part of this manual may be reproduced or transmitted in any form or by any means, for any purpose other than the purchaser's personal use, without the expressed written permission of Wasp Barcode Technologies.

Agency Compliance and Approvals



EN 55022, Class A EN 55024 EN 60950-1

This is a class A product. In a domestic environment this product may cause radio interference in which case the user may be required to take adequate measures.

FCC part 15B, Class A ICES-003, Class A



This equipment has been tested and found to comply with the limits for a Class A digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference when the equipment is operated in a commercial environment.

This equipment generates, uses, and can radiate radio frequency energy and, if not installed and used in accordance with the manufacturer's instruction manual, may cause harmful interference with radio communications. Operation of this equipment in a residential area is likely to cause harmful interference, in which case you will be required to correct the interference at your own expense.

This Class A digital apparatus complies with Canadian ICES-003. Cet appareil numérique de la classe A est conform à la norme NMB-003 du Canada.



AS/NZS CISPR 22, Class A



GB 4943.1 GB 9254, Class A GB 17625.1



Energy Star for Imaging Equipment Version 2.0

KN 22 Class A / KN 24



BIS

13252 (Part 1)

Wichtige Sicherheits-Hinweise

- 1. Bitte lesen Sie diese Hinweis sorgfältig durch.
- 2. Heben Sie diese Anleitung für den späteren Gebrauch auf.
- 3. Vor jedem Reinigen ist das Gerät vom Stromentz zu trennen. Verwenden Sie keine Flüssig-oder Aerosolreiniger. Am besten eignet sich ein angefeuchtetes Tuch zur Reinigung.

- 4. Die Netzanschluß-Steckdose soll nahe dem Gerät angebracht und leicht zugänglich sein.
- 5. Das Gerät ist vor Feuchtigkeit zu schützen.
- 6. Bei der Aufstellung des Gerätes ist auf sicheren Stand zu achten. Ein Kippen oder Fallen könnte Beschädigungen hervorrufen.
- 7. Beachten Sie beim Anschluß ans Stromnetz die Anschlußwerte.
- 8. Dieses Gerät kann bis zu einer Außentemperatur von maximal 40℃ betrieben werden.

CAUTION:

Risk of explosion if battery is replaced by an incorrect type.

Dispose of used batteries according to the instructions.

"VORSICHT"

Explosionsgefahr bei unsachgemäßen Austaush der Batterie. Ersatz nur durch denselben oder einem vom Hersteller empfohlenem ähnlichen Typ. Entsorgung gebrauchter Batterien nach Angabren des Herstellers.

CAUTION:

Any changes or modifications not expressly approved by the grantee of this device could void the user's authority to operate the equipment.

CAUTION:

HAZARDOUS MOVING PARTS, KEEP FINGER AND OTHER BODY PARTS AWAY.

Contents

1.	Introduction	1
	1.1 Product Introduction	1
	1.2 Product Features	2
	1.2.1 Printer Standard Features	2
	1.2.2 Printer Optional Features	3
	1.3 General Specifications	4
	1.4 Print Specifications	4
	1.5 Media Specifications	5
2.	Operations Overview	6
	2.1 Unpacking and Inspection	6
	2.2 Printer Overview	7
	2.2.1 Front & rear	7
	2.2.2 Interior View	8
	2.3 LED and Button Function	9
	2.3.1 LED Indication	9
	2.3.2 Regular Button Function	
3.	Setup	10
	3.1 Setting up the Printer	10
	3.2 Loading the Media	11
	3.2.1 Loading the Roll Labels	11
	3.2.2 Loading External Media	13
	3.2.3 Loading Media in Peel-off Mode (Option)	15
	3.2.4 Loading Media in Cutter Mode (Option)	17
	3.3 Install the Adapter for 1.5" Paper Core (Option)	18
4.	Power-on Utilities	19
	4.1 Gap/Black Mark Sensor Calibration	20
	4.2 Gap/Black Mark Calibration, Self-test and Dump Mode	21
	4.2.1 Self-test	22
	4.2.2 Dump mode	24
	4.3 Printer Initialization	25
	4.4 Set Black Mark Sensor as Media Sensor and Calibrate the Black Mark Sensor	26
	4.5 Set Gap Sensor as Media Sensor and Calibrate the Gap Sensor	26
	4.6 Skip AUTO.BAS	27

5.	Diagnostic Tool	28
	5.1 Start the Diagnostic Tool	28
	5.2 Printer Function	29
	5.3 Setting Ethernet by Diagnostic Tool (Option)	30
	5.3.1 Using USB interface to setup Ethernet interface	30
	5.3.2 Using RS-232 interface to setup Ethernet interface	31
	5.3.3 Using Ethernet interface to setup Ethernet interface	32
6.	Troubleshooting	35
	6.1 LED Status	35
	6.2 Print Problem	36
7.	Maintenance	37
Re	evise History	38

1. Introduction

1.1 Product Introduction

Thank you very much for purchasing a Wasp barcode printer.

The WPL206 Series of direct thermal desktop printers are ideal for a wide variety of applications including product marking, point of sale, retail, small office, shipping labels, and other labeling and tag applications at the best price anywhere.

The WPL206 Series is a perfect combination of affordability with a durable and reliable design. With a cost that can't be beat, the WPL206 series offers both 203 and 300 dots per inch print resolution with printing speeds up to a fast 6 inches per second. The large 60 watt power supply produces high quality printed labels, even at its fastest print speeds.

For easy loading, the WPL206 employs a user-friendly double-wall clamshell design with a large five-inch (outside diameter) center-biased media bay. The spring-loaded label roll holder makes loading simple. Top-of-form sensing – by gap, black mark, or notch – is standard. The printer also comes with a head-open sensor.

The WPL206 has plenty of memory with 128 MB Flash & 64 MB SDRAM that can be used for easy storage of fonts, international character sets and graphics, and it supports, "right out of the box," a fully compatible set of standard industry emulations, including Line Mode, Eltron[®] and Zebra[®] languages, making it easy to replace old installed hardware.

To print label formats, please refer to the instructions provided with your labeling software; if you need to write the custom programs, please refer to the WPL/WPL2 programming manual that can be found on the accessories CD-ROM or on Wasp Barcode website at http://www.waspbarcode.com.

Applications

- Small Parcel Shipping
- Mail Room Address and Routing Labels
- Shipping & Receiving
- Entertainment and Transportation Ticketing
- Retail Point-of-Sale
- File-Folder Labeling

1.2 Product Features

1.2.1 Printer Standard Features

The printer offers the following standard features.

Product standard feature					
Direct thermal printing					
Gap transmissive sensor (Fixed, center of offset to right 4 mm from center)					
Black mark reflective sensor (Fixed, center of offset to right 4 mm from	center)				
Head open sensor	·				
1 operation button					
1 LED with 3 colors					
USB 2.0 (High speed mode) interface					
32-bit RISC high performance processor					
64 MB DDR2 SDRAM memory					
128 MB NAND Flash memory					
Eltron [®] EPL and Zebra [®] ZPL emulation lan	guages support				
Internal 8 alpha-numeric bitmap fonts					
One Monotype Imaging® CG Triumvirate Bold Condensed scalable font					
Built-in Monotype True Type Font engine	Built-in Monotype True Type Font engine				
Fonts and bar codes can be printed in any	one of the four direction	ns (0, 90,180, 270 degree)			
Downloadable fonts from PC to printer me	mory				
Downloadable firmware upgrades					
Bar code, graphics/image printing					
Supported bar code		Supported image			
1D bar code	2D bar code	BITMAP, BMP, PCX			
Code128 subsets A.B.C, Code128UCC, EAN128, Interleave 2 of 5, Code 39, Code 93, EAN-13, EAN-8, Codabar, POSTNET, UPC-A, UPC-E, EAN and UPC 2(5) digits, MSI, PLESSEY, China Post, ITF14, EAN14, Code 11, TELPEN, PLANET, Code 49, Deutsche Post Identcode, Deutsche Post Leitcode,	CODABLOCK F mode, DataMatrix, Maxicode, PDF-417, Aztec, MicroPDF417, QR code, RSS Barcode (GS1 Databar)	(Max. 256 colors graphics)			

Code page Codepage 437 (English - US) Codepage 737 (Greek) Codepage 850 (Latin-1) Codepage 852 (Latin-2) Codepage 855 (Cyrillic) Codepage 857 (Turkish) Codepage 860 (Portuguese) Codepage 861 (Icelandic) Codepage 862 (Hebrew) Codepage 863 (French Canadian) Codepage 864 (Arabic) Codepage 865 (Nordic) Codepage 866 (Russian) Codepage 869 (Greek 2) Codepage 950 (Traditional Chinese) Codepage 936 (Simplified Chinese) Codepage 932 (Japanese) Codepage 949 (Korean) Codepage 1250 (Latin-2) Codepage 1251 (Cyrillic) Codepage 1252 (Latin-1) Codepage 1253 (Greek) Codepage 1254 (Turkish) Codepage 1255 (Hebrew) Codepage 1256 (Arabic) Codepage 1257 (Baltic) Codepage 1258 (Vietnam) ISO-8859-1: Latin-1 (Western European) ISO-8859-2: Latin-2 (Central European) ISO-8859-3: Latin-3 (South European) ISO-8859-4: Latin-4 (North European) ISO-8859-5: Cyrillic ISO-8859-6: Arabic ISO-8859-7: Greek

- ISO-8859-8: Hebrew
- ISO-8859-9: Turkish
- · ISO-8859-10: Nordic
- · ISO-8859-15: Latin-9
- UTF-8

1.2.2 Printer Optional Features

The printer offers the following optional features.

Product option feature	User option	Dealer option	Factory option
Peel-off module		0	
Guillotine cutter (Full cut or partial cut / Paper thickness: 0.06~0.19 mm)		0	
Real time clock			0
USB host, for scanner or PC keyboard			0
Internal Ethernet, 10/100 Mbps			0
RS-232 (Max. 115,200 bps)			0
Internal 802.11 a/b/g/n wireless module			0
Internal Bluetooth module			0
1.5" adapter	0		
KP-200 Plus keyboard display unit (option with RS-232)	0		
KU-007 Plus programmable smart keyboard (option with RS-232)	0		

1.3 General Specifications

General Specifications				
Physical dimensions	195 mm x 172 mm x 165 mm Note : 195 mm x 178.5 mm x 165 mm (incl. open lever)			
Mechanism	Plastic with double-walled clamshell design			
Weight	1.5 kg			
Power	External universal switching power supply Input: AC 100-240V, 50-60Hz Output: DC 24V, 2.5A, 60W			
Environmental condition	Operation: 5 ~ 40°C, 25~85% non-condensing Note: Peeler mode: 40°C/ 45% Storage: -40 ~ 60 °C, 10~90% non-condensing			
Environmental concern	Comply with RoHS, WEEE			

1.4 Print Specifications

Print Specifications	203 dpi models	300 dpi models	
Print head resolution	203 dots/inch	300 dots/inch	
(dots per inch/mm)	(8 dots/mm) (12 dots/mm)		
Printing method	Direct th	nermal	
Dot size (width x length)	0.125 x 0.125 mm (1 mm = 8 dots)	0.084 x 0.084 mm (1 mm = 11.8 dots)	
Max. print speed	152.4 mm (6") 102 mm (4")		
(inches per second)	2,3 ips for peeler mode		
Max. print width	108 mm (4.25")	105.7 mm (4.16")	
Max. print length	90" (2286 mm)		
Printout bias	Vertical: max. 1 mm Horizontal: max. 1 mm		

1.5 Media Specifications

Media Specifications				
Media roll capacity	127 mm (5 ") OD			
Media core diameter	1" (1.5") ID core Note: 1.5" adapter			
Media type	Continuous, die-cut, black mark, External fan-fold, receipt			
Media wound type Outside wound				
Media width 19 mm ~ 114 mm (0.7"~ 4.5")				
Media thickness	0.055 mm ~ 0.19 mm (2.16 ~ 7.48 mil)			
Label length 10 mm ~ 2,286 mm (0.39" ~ 90") 1" ~ 6" for peeler mode 1" ~ max. for cutter mode				
Gap height Min. 2 mm				
Black mark height	Min. 2 mm			
Black mark width	Min. 16 mm			


2. Operations Overview

2.1 Unpacking and Inspection

This printer has been specially packaged to withstand damage during shipping. Please carefully inspect the packaging and printer upon receiving the bar code printer. Please retain the packaging materials in case you need to reship the printer.

Unpacking the printer, the following items are included in the carton. If any parts are missing, please contact the Customer Service Department of your purchased reseller or distributor.

- One printer unit
- One Windows labeling software/ Windows driver CD disk
- One quick installation guide
- One USB port cable
- One power cord
- One power supply

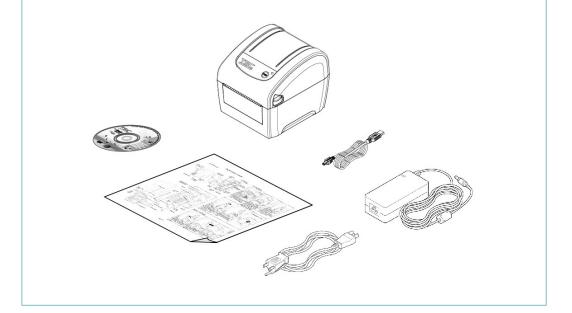


2.2 Printer Overview

2.2.1 Front & rear



2.2.2 Interior View

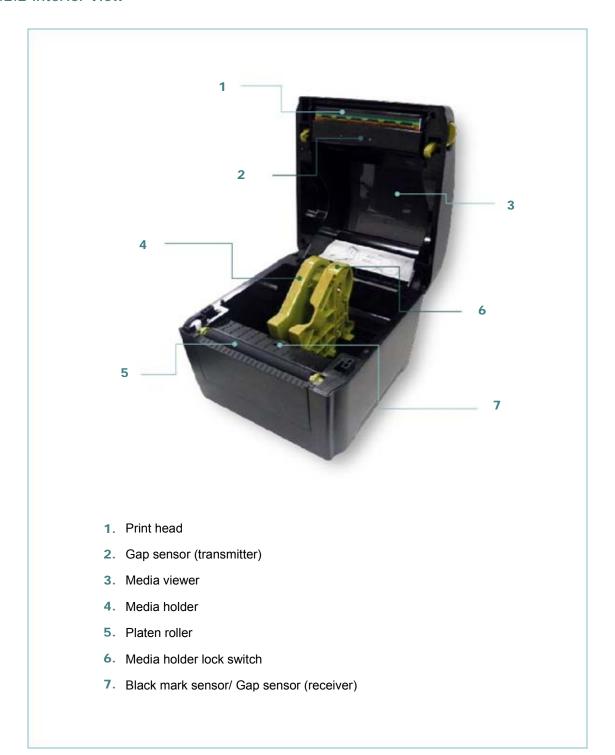

2.3 LED and Button Function

This printer has one button and one three-color LED indicator. By indicating the LED with different color and pressing the button, printer can feed labels, pause the printing job, select and calibrate the media sensor, print printer self-test report, reset printer to defaults (initialization). Please refer to the button operation below and "Power-on Utilities" section for different functions.

2.3.1 LED Indication

LED Color	Description
Green/ Solid	This illuminates that the power is on and the device is ready to use.
Green/ Flash	This illuminates that the system is downloading data from PC to memory or the printer is paused.
Amber	This illuminates that the system is clearing data from printer.
Red / Solid	This illuminates printer head open, cutter error.
Red / Flash	This illuminates a printing error, such as head open, paper empty, paper jam, or memory error etc.

2.3.2 Regular Button Function

1. Feed labels

When the printer is at ready states (Green/ Solid), press the button to feed one label to the beginning of next.

2. Pause the printing job

When the printer is at printing states, press the button to pause a print job. When the printer is paused the LED will be green blinking. Press the button again to continue the printing job.

3. Setup

3.1 Setting up the Printer



- Place the printer on a flat, secure surface.
- 2. Make sure the power switch is off.
- 3. Connect the printer to the computer with the provided USB cable.
- Plug the power cord into the AC power cord socket at the rear of the printer, and then plug the power cord into a properly grounded power outlet.

Note:

- * Please switch OFF (O) printer power switch prior to plug in the power cord to printer power iack.
- * The interface picture here is for reference only. Please refer to the product specification for the interfaces availability.

3.2 Loading the Media

3.2.1 Loading the Roll Labels



1. Open the printer top cover by pressing up the top cover open tabs located on each side of the printer.



2. Separate the media holders to the label roll width.



3. Place the roll between the holders and close them onto the core.



4. Place the label leading edge onto the platen roller. (printing side face up)



- 5. Close the top cover gently and make sure the cover latches securely.6. Use "Diagnostic Tool" to set the media
- Use "Diagnostic Tool" to set the media sensor type and calibrate the selected sensor. (Start the "Diagnostic tool" → Select the "Printer Configuration" tab → Click the "Calibrate Sensor" button)


Note

* Please calibrate the gap/black mark sensor when changing media.


3.2.2 Loading External Media



Open the printer top cover by pressing up the top cover open tabs located on each side of the printer.

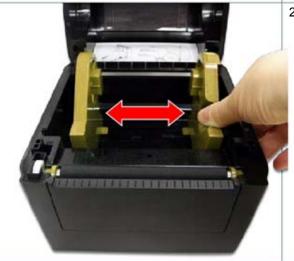

 Separate the media holders to the label width.

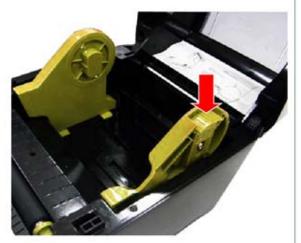

3. Press down the media holder lock switch to fix the media holder.



- 4. Feed the media through the rear external label entrance chute. (printing side face up) Place the label leading edge onto the platen roller.
- 5. Close the top cover gently and make sure the cover latches securely.
- 6. Use "Diagnostic Tool" to set the media sensor type and calibrate the selected sensor. (Start the "Diagnostic tool" → Select the "Printer Configuration" tab → Click the "Calibrate Sensor" button)

Note:

* Please calibrate the gap/black mark sensor when changing media.

3.2.3 Loading Media in Peel-off Mode (Option)



- Please refer to section 3.2.1 to load the media. Place the label leading edge onto the platen roller.
- Close the top cover gently. Use "Diagnostic Tool" to set the media sensor type, calibrate the selected sensor and set the post-print action to "PEEL".



Note:

Please calibrate the sensor before loading media into the peel-off module for avoiding paper jam.

3. Open the top cover and peel-off cover. Feed the media into peel-off cover slot.



4. Close the peel-off cover and printer cover.

Note:

Make sure the latches of peel-off cover are engaged securely by printer cover.






5. Printer is ready for peel-off mode. Print a label for test.

Note:

* Please calibrate the gap/black mark sensor when changing media.

3.2.4 Loading Media in Cutter Mode (Option)

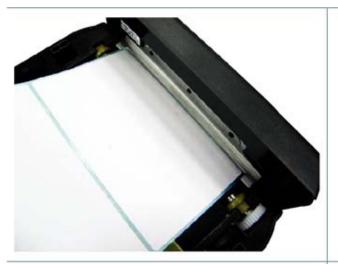

1. Please refer to section 3.2.1 to load the media. Lead the paper through the cutter paper opening.



- Close the top cover gently.
 Use "Diagnostic Tool" to set the media sensor type, calibrate the selected sensor and set the post-print action to "CUTTER".




3.3 Install the Adapter for 1.5" Paper Core (Option)



1. Please refer to section 3.2.2 to fix the media holders for installing the 1.5" adapters.



2. Press 1.5" adapters into both media holders for using 1.5: core media roll.

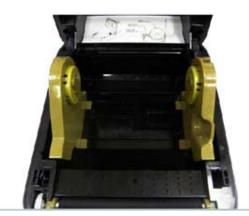

4. Power-on Utilities

There are six power-on utilities to set up and test printer hardware. These utilities are activated by pressing FEED button then turning on the printer power simultaneously and release the button at different color of LED.

Please follow the steps below for different power-on utilities.

- 1. Turn off the power switch.
- 2. Hold on the button then turn on the power switch.
- 3. Release the button when LED indicates with different color for different functions.

Power on utilities		The LED color will be changed as following pattern:					
LED color	Amber	Red	Amber	Green	Green/Amber	Red/Amber	Solid green
Functions		(5 blinks)	(5 blinks)	(5 blinks)	(5 blinks)	(5 blinks)	
1. Gap / black mark sensor calibration		Release					
2. Gap / black mark sensor calibration, Self-test and enter dump mode			Release				
3. Printer initialization				Release			
4. Set black mark sensor as media sensor and calibrate the black mark sensor					Release		
5. Set gap sensor as media sensor and calibrate the gap sensor						Release	
6. Skip AUTO.BAS							Release

4.1 Gap/Black Mark Sensor Calibration

Gap/black mark sensor sensitivity should be calibrated at the following conditions:

- 1. A brand new printer
- 2. Change label stock.
- 3. Printer initialization.

Please follow the steps below to calibrate the gap/black mark sensor.

- 1. Turn off the power switch.
- 2. Hold on the button then turn on the power switch.
- 3 Release the button when LED becomes red and blinking. (Any red will do during the 5 blinks).
- It will calibrate the gap/black mark sensor sensitivity.
- The LED color will be changed as following order :

Amber \rightarrow red (5 blinks) \rightarrow amber (5 blinks) \rightarrow green (5 blinks) \rightarrow green/amber (5 blinks) \rightarrow red/amber (5 blinks) \rightarrow solid green

Note:

- 1. Sensor calibration can be done by Diagnostic Tool or by power on utility. Please refer to "Diagnostic Tool" section for more information.
- 2. Please select gap or black mark sensor type prior to calibrate the sensor.

4.2 Gap/Black Mark Calibration, Self-test and Dump Mode

While calibrate the gap/black mark sensor, printer will measure the label length, print the internal configuration (self-test) on label and then enter the dump mode. To calibrate gap or black mark sensor, depends on the sensor setting in the last print job.


Please follow the steps below to calibrate the sensor.


- 1. Turn off the power switch.
- 2. Hold on the button then turn on the power switch.
- 3. Release the button when LED becomes amber and blinking. (Any amber will do during the 5 blinks)
- The LED color will be changed as following order.
 Amber → red (5 blinks) → amber (5 blinks) → green (5 blinks) → green/amber (5 blinks) → red/amber (5 blinks) → solid green
- 4. It calibrates the sensor and measures the label length and prints internal settings then enter the dump mode.

Note:

- 1. Sensor calibration can be done by Diagnostic Tool or by power on utility. Please refer to "Diagnostic Tool" section for more information.
- 2. Please select gap or black mark sensor type prior to calibrate the sensor.


Printer will print the printer configuration after media sensor calibration. Self-test printout can be used to check if there is any dot damage on the heater element, printer configurations and available memory space.

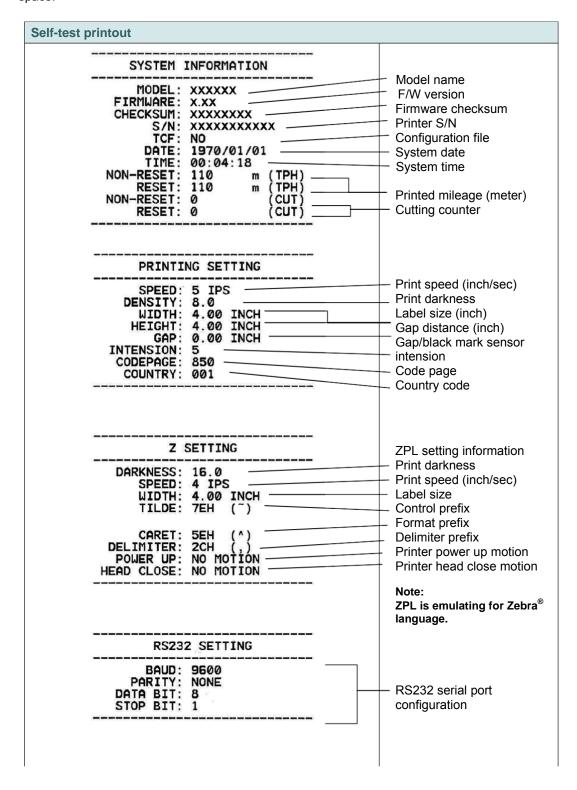

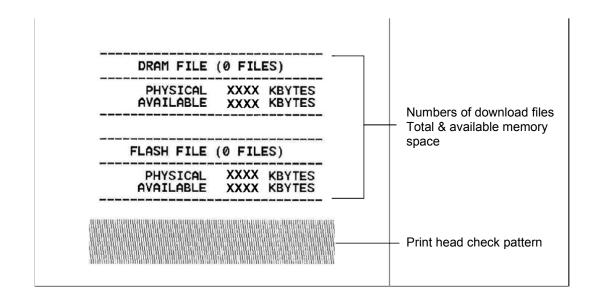

4.2.2 Dump mode

Printer will enter dump mode after printing printer configuration. In the dump mode, all characters will be printed in 2 columns as following. The left side characters are received from your system and right side data are the corresponding hexadecimal value of the characters. It allows users or engineers to verify and debug the program.

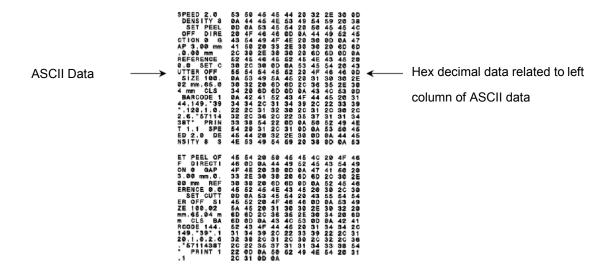

Note:

- 1. Dump mode requires 4" wide paper width.
- 2. Turn off / on the power or press FEED button to resume printer for normal printing. (Ready mode)

4.3 Printer Initialization

Printer initialization is used to clear DRAM and restore printer settings to defaults.

Printer initialization is activated by the following procedures.

- 1. Turn off the power switch.
- 2. Hold on the button then turn on the power switch.
- 3. Release the button when LED turns green after 5 amber blinks. (Any green will do during the 5 blinks).
- The LED color will be changed as following:
 Amber → red (5 blinks) → amber (5 blinks) → green (5 blinks) → green/amber (5 blinks) → red/amber
 (5 blinks) → solid green

Printer configuration will be restored to defaults as below after initialization.

Parameter	Default setting	
Cnood	127 mm/sec (5 ips) (203DPI)	
Speed	76.2 mm/sec (3 ips) (300 DPI)	
Density	8	
Media Width	4" (101.5 mm)	
Media Height	4" (101.5 mm)	
Sensor Type	Gap sensor	
Print Direction	0	
Reference Point	0,0 (upper left corner)	
Gap Offset	0	
Post-Print Action	Tear mode	
Serial Port Settings	9600 bps, none parity, 8 data bits, 1 stop bit	
Code Page	850	
Country Code	001	
Clear Flash Memory	No	

Note:

When printer initialization has done, please calibrate the gap or black mark sensor before printing.

4.4 Set Black Mark Sensor as Media Sensor and Calibrate the Black Mark Sensor

Please follow the steps as below.

- 1. Turn off the power switch.
- 2. Hold on the button then turn on the power switch.
- 3. Release the button when LED turns **green/amber** after 5 green blinks. (Any green/amber will do during the 5 blinks).
- The LED color will be changed as following:
 Amber → red (5 blinks) → amber (5 blinks) → green (5 blinks) → green/amber (5 blinks) → red/amber (5 blinks) → solid green

4.5 Set Gap Sensor as Media Sensor and Calibrate the Gap Sensor

Please follow the steps as below.

- 1. Turn off the power switch.
- 2. Hold on the button then turn on the power switch.
- 3. Release the button when LED turns **red/amber** after 5 green/amber blinks. (Any red/amber will do during the 5 blinks).
- The LED color will be changed as following:
 Amber → red (5 blinks) → amber (5 blinks) → green (5 blinks) → green/amber (5 blinks) → red/amber
 (5 blinks) → solid green

4.6 Skip AUTO.BAS

WPL2 programming language allows user to download an auto execution file to flash memory. Printer will run the AUTO.BAS program immediately when turning on printer power. The AUTO.BAS program can be interrupted without running the program by the power-on utility.

Please follow the procedures below to skip an AUTO.BAS program.


- 1. Turn off printer power.
- 2. Press the FEED button and then turn on power.
- 3. Release the FEED button when LED becomes solid green.
- The LED color will be changed as following:
 Amber → red (5 blinks) → amber (5 blinks) → green (5 blinks) → green/amber (5 blinks) → red/amber
 (5 blinks) → solid green
- 4. Printer will be interrupted to run the AUTO.BAS program.

5. Diagnostic Tool

Wasp Barcode's Diagnostic Utility is an integrated tool incorporating features that enable you to explore a printer's settings/status; change a printer's settings; download graphics, fonts and firmware; create a printer bitmap font; and send additional commands to a printer. With the aid of this powerful tool, you can review printer status and setting in an instant, which makes it much easier to troubleshoot problems and other issues.


5.1 Start the Diagnostic Tool

- 1. Double click on the Diagnostic tool icon
- DiagTool.exe to start the software.
- 2. There are four features (Printer Configuration, File Manager, Bitmap Font Manager, Command Tool) included in the Diagnostic utility.

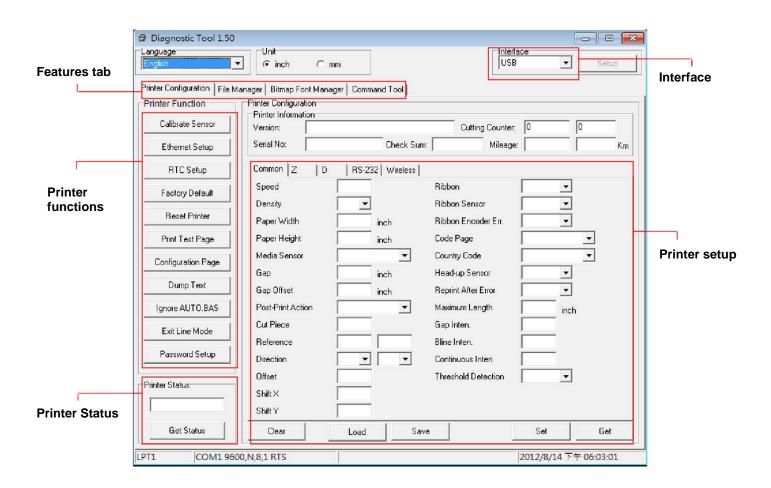


5.2 Printer Function

- 1. Connect the printer and computer with a cable.
- 2. Select the PC interface connected with bar code printer.

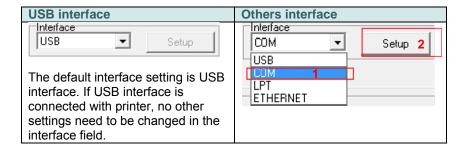

- 3. Click the "Printer Function" button to setup.
- 4. The detail functions in the Printer Function Group are listed as below.

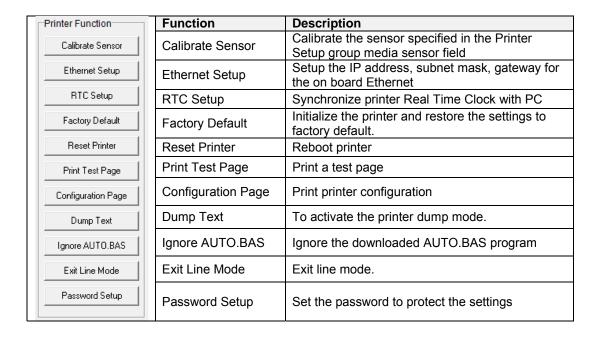

For more information about Diagnostic Tool, please refer to the diagnostic utility quick start guide in the CD disk \ Utilities directory.

5.3 Setting Ethernet by Diagnostic Tool (Option)


The Diagnostic Utility is enclosed in the CD disk \Utilities directory or can be downloaded from www.waspbarcode.com website. Users can use Diagnostic Tool to setup the Ethernet by USB and Ethernet interfaces. The following contents will instruct users how to configure the Ethernet by these interfaces.

5.3.1 Using USB interface to setup Ethernet interface

- 1. Connect the USB cable between the computer and the printer.
- 2. Turn on the printer power.
- 3. Start the Diagnostic Utility by double clicking on the DiagToolexe icon.
- 4. The Diagnostic Utility default interface setting is USB interface. If USB interface is connected with printer, no other settings need to be changed in the interface field.




5. Click on the "Ethernet Setup" button from "Printer Function" group in Printer Configuration tab to setup the IP address, subnet mask and gateway for the on board Ethernet.

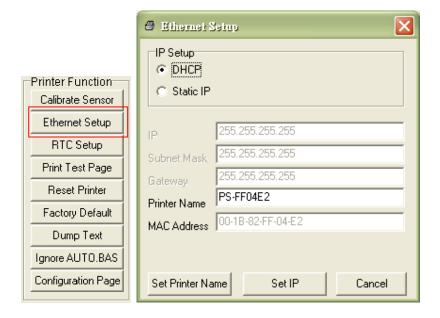

5.3.2 Using RS-232 interface to setup Ethernet interface

- 1. Connect the computer and the printer with a RS-232 cable.
- 2. Turn on the printer power.
- 3. Start the Diagnostic Utility by double clicks on the DiagTool.exe icon.
- 4. Select "COM" as interface then click on the "Setup" button to setup the serial port baud rate, parity check, data bits, stop bit and flow control parameters.

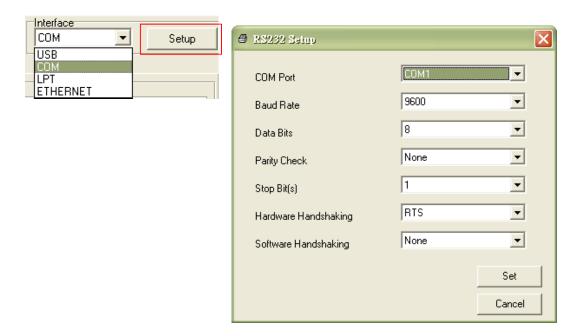


5. Click on the "Ethernet Setup" button from printer function of Printer Configuration tab to setup the IP address, subnet mask and the gateway for the on board Ethernet.






5.3.3 Using Ethernet interface to setup Ethernet interface

- 1. Connect the computer and the printer to the LAN.
- 2. Turn on the printer power.
- 3. Start the Diagnostic Utility by double clicks on the DiagToolexe icon.
- 4. Select "Ethernet" as the interface then click on the "Setup" button to setup the IP address, subnet mask and gateway for the on board Ethernet.

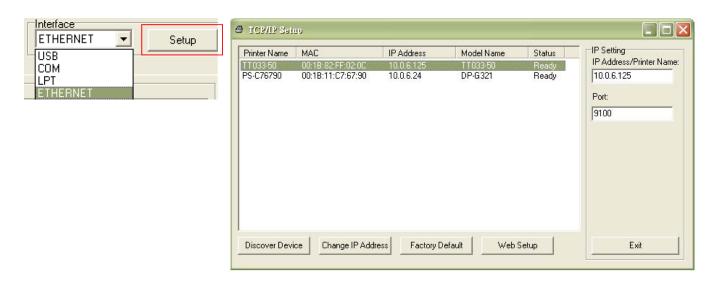

5. Click the "Discover Device" button to explore the printers that exist on the network.

- 6. Select the printer in the left side of listed printers, the correspondent IP address will be shown in the right side "IP address/Printer Name" field.
- 7. Click "Change IP Address" to configure the IP address obtained by DHCP or static.

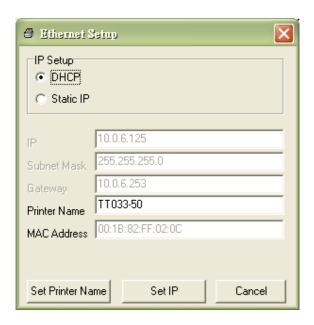

The default IP address is obtained by DHCP. To change the setting to static IP address, click "Static IP" radio button then enter the IP address, subnet mask and gateway. Click "Set IP" to take effect the settings.

Users can also change the "Printer Name" by another model name in this fields then click "Set Printer Name" to take effect this change.

Note: After clicking the "Set Printer Name" or "Set IP" button, printer will reset to take effect the settings.

8. Click "Exit" button to exit the Ethernet interface setup and go back to Diagnostic Tool main screen.

Factory Default button

This function will reset the IP, subnet mask, gateway parameters obtained by DHCP and reset the printer name.

Web setup button

Except to use the Diagnostic Utility to setup the printer, you can also explore and configure the printer settings and status or update the firmware with the IE or Firefox web browser. This feature provides a user friendly setup interface and the capability to manage the printer remotely over a network.

6. Troubleshooting

The following guide lists the most common problems that may be encountered when operating this bar code printer. If the printer still does not function after all suggested solutions have been invoked, please contact the Customer Service Department of your purchased reseller or distributor for assistance.

6.1 LED Status

This section lists the common problems that according to the LED status and other problems you may encounter when operating the printer. Also, it provides solutions.

LED Status / Printer Status Possi Color		Possible Cause	Recovery Procedure
OFF	No response	No power	 * Turn on the power switch. * Check if the green LED is lit on power supply. If it is not lit on, power supply is broken. * Check both power connections from the power cord to the power supply and from the power supply to the printer power jack if they are connected securely.
Solid Green	ON	The printer is ready to use	* No action necessary.
Green with blinking	Pause	The printer is paused	* Press the FEED button to resume for printing.
Red with blinking	Error	The out of label or the printer setting is not correct	1. Out of label * Load a roll of label and follow the instructions in loading the media then press the FEED button to resume for printing. 2. Printer setting is not correct * Initialize the printer by instructions in "Power on Utility" or "Diagnostic Tool".

Note:

Printer status can be easily shown on the Diagnostic Tool. For more information about the Diagnostic Tool, please refer to the instruction in the software CD disk.

6.2 Print Problem

Problem	Possible Cause	Recovery Procedure	
	Check if interface cable is well connected to the interface connector.	Re-connect cable to interface.	
	The serial port cable pin configuration is not pin to pin connected.	Please replace the cable with pin to pin connected.	
Not Printing	The serial port setting is not consistent between host and printer.	Please reset the serial port setting.	
	The port specified in the Windows driver is not correct.	Select the correct printer port in the driver.	
	The Ethernet IP, subnet mask, gateway is not configured properly.	Configure the IP, subnet mask and gateway.	
No print on the label	Label loaded not correctly.	Follow the instructions in loading the media.	
Continuous feeding labels	The printer setting may go wrong.	Please do the initialization and gap/black mark calibration.	
	Gap/black mark sensor sensitivity is not set properly (sensor sensitivity is not enough)	Calibrate the gap/black mark sensor.	
Paper Jam	Make sure label size is set properly.	Set label size exactly as installed paper in the labeling software or program.	
	Labels may be stuck inside the printer mechanism near the sensor area.	Remove the stuck label.	
	Top cover is not closed properly.	Close the top cover completely and make sure the right side and left side levers are latched properly.	
	Wrong power supply is connected with printer.	Check if 24V DC output is supplied by the power supply.	
Poor Print Quality	Check if supply is loaded correctly.	Reload the supply.	
	Check if dust or adhesives are accumulated on the print head.	Clean the print head.	
	Check if print density is set properly.	Adjust the print density and print speed.	
	Check print head test pattern if head element is damaged.	Run printer self-test and check the print head test pattern if there is dot missing in the pattern.	

7. Maintenance

This session presents the clean tools and methods to maintain your printer.

- 1. Please use one of following material to clean the printer.
 - Cotton swab
 - Lint-free cloth
 - Vacuum / Blower brush
 - 100% Ethanol or Isopropyl Alcohol
- 2. The cleaning process is described as following,

Printer Part	Method	Interval			
Print Head	Always turn off the printer before cleaning the print head. Allow the print head to cool for a minimum of one minute. Use a cotton swab and 100% Ethanol or Isopropyl Alcohol to clean the print head surface.	Clean the print head when changing a new label roll.			
		Print Head			
	Print Head Element Head Cleaner Pen	Element			
Platen Roller	Turn the power off. Rotate the platen roller and wipe it thoroughly with water.	Clean the platen roller when changing a new label roll			
Peel Bar	Use the lint-free cloth with 100% ethanol to wipe it.	As needed			
Sensor	Compressed air or vacuum	Monthly			
Exterior	Wipe it with water-dampened cloth	As needed			
Interior	Brush or vacuum	As needed			

Note:

- Do not touch printer head by hand. If you touch it careless, please use ethanol to cleanit.
- Please use 100% Ethanol or Isopropyl Alcohol. DO NOT use medical alcohol, which may damage the printer head.
- Regularly clean the print head and supply sensors once change a new media to keep printer performance and extend printer life.

Revise History

Date	Content	Editor
2015/9/24	Modify section 1.4 (Max. print speed to 6" for WPL206)	Camille
2016/3/29	Modify section 3.2.3 (Loading Media in Peel-off Mode)	Camille
2016/7/21	Remove linerless cutter	Camille
2017/5/15	Add section 1.2.2 factory option for Internal 802.11 a/b/g/n wireless module and Internal Bluetooth module Delete section 1.2.2 User option External wireless 802.11 a/b/g/n connectivity (option with RS-232) Add section 1.5 Label length to 10 mm ~ 2,286 mm (0.39" ~ 90")	Kate
2017/8/7	Delete section 1.2.1 Bluetooth 4.0 and 802.11 a/b/g/n	Kate
2017/8/24	Modify section 1.2.2 (Add cutter spec)	Camille



Wasp Barcode Technologies

Corporate Headquarters
1400 10th St Plano,
TX 75074
TEL: 214-547-4100
Website: www.waspbarcode.com
E-mail: support.waspbarcode.com